TOP AND CONSOLE PARTS

29"ELECTRIC DRYER

KitchenAid®

For Models: KEYS700JQ0, KEYS700JT0

(Designer White) (Biscuit)

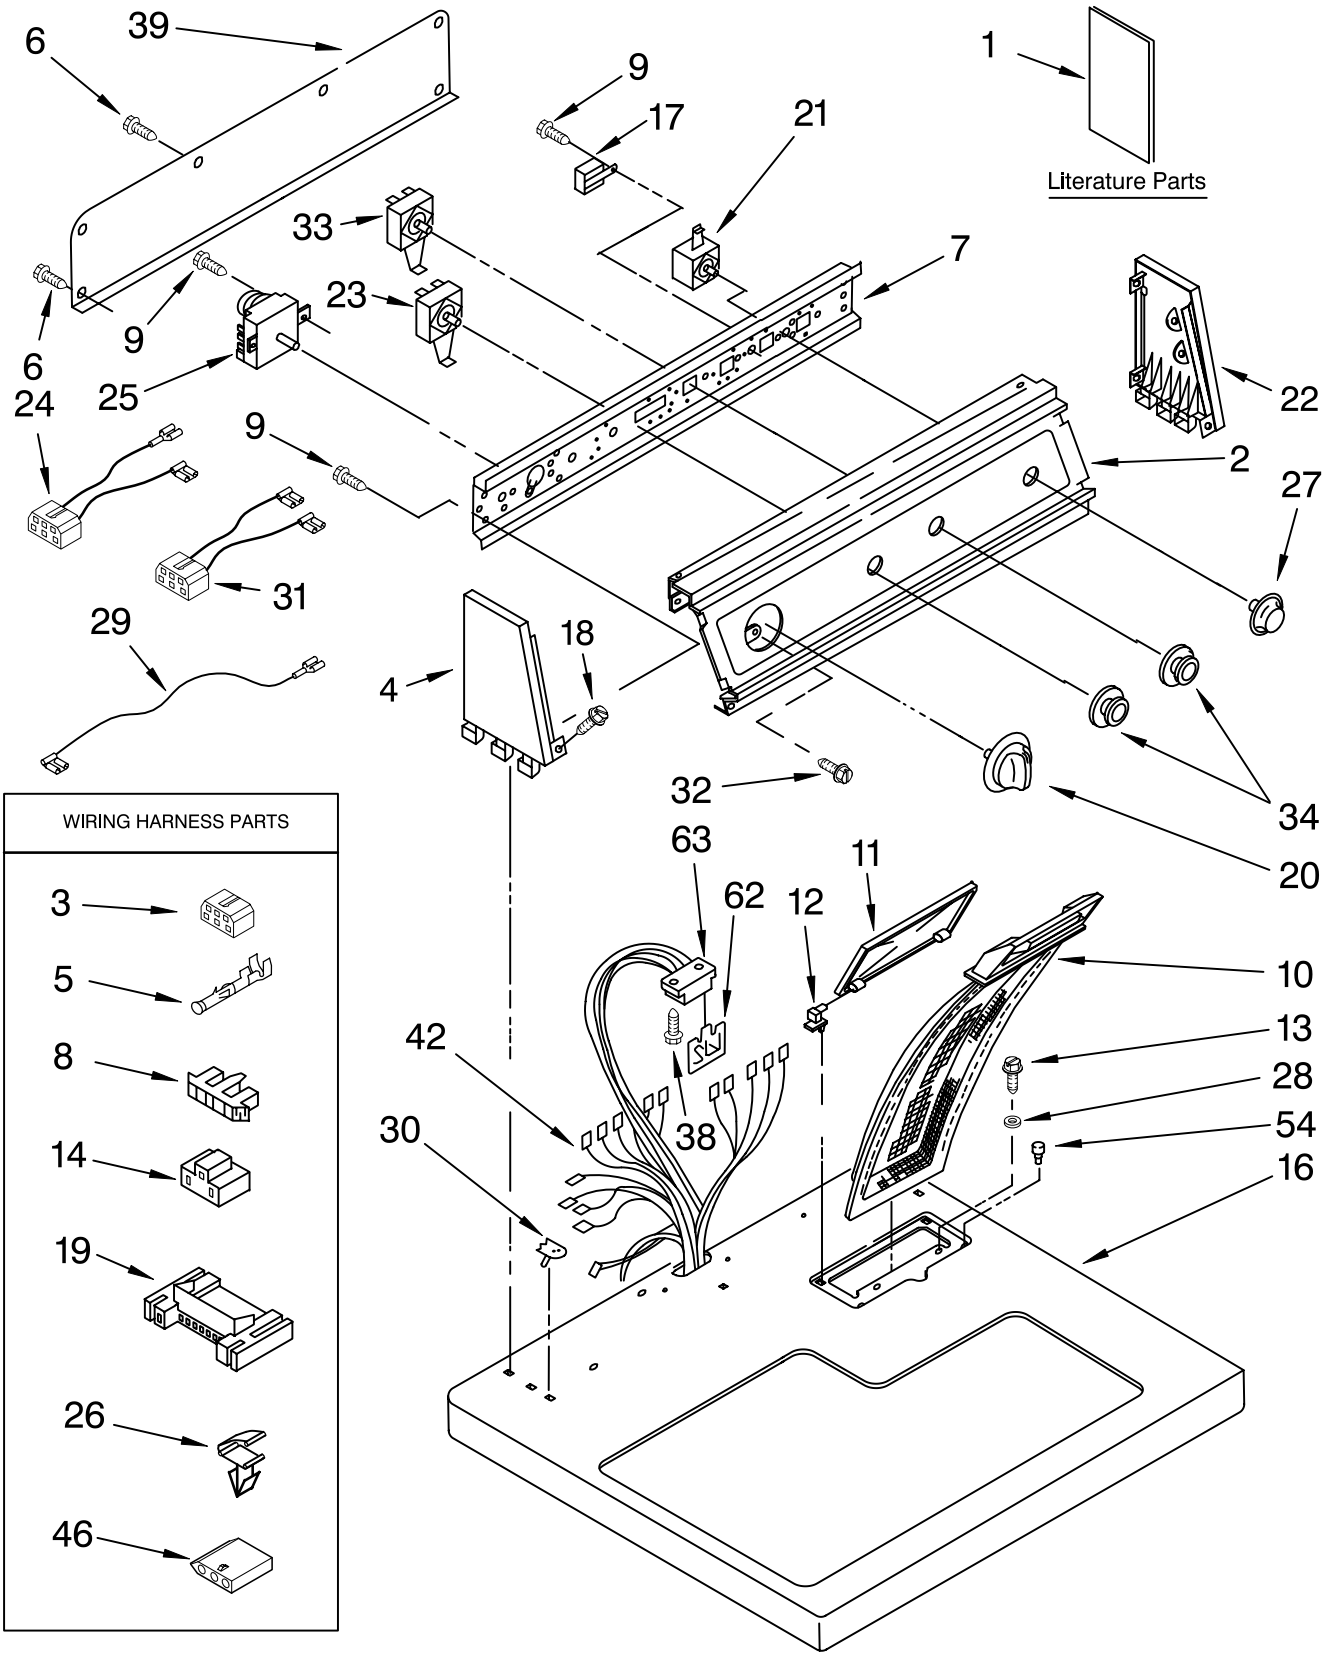

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Models: KEYS700JQ0, KEYS700JT0
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT3397618	Installation Instructions
	LIT3405635	Use & Care Guide
	LIT3406699	Label, Wiring Diagram
2		Panel, Control
	3977962	White
	3977963	Biscuit
3	3347243	Connector 6−Circuit
4		End Cap (L.H.)
	8274353	White
	8274355	Biscuit
5	94614	Terminal
6	693995	Screw, Hex Head
7	8271418	Bracket, Control
8	3397269	Connector, Timer
9	3390646	Screw, 8−18 x 5/16
10	349639	Screen, Lint
11		Cover, Lint Screen
	3977235	White
	3977237	Biscuit
12		Hinge, Lint Lid
	3978605	R.H.
	3978606	L.H.
13	688983	Screw, 8−18 x 5/8
14	3401144	Connector (Relay/Buzzer)
16		Top
	8274386	White
	8274387	Biscuit
17	694419	Buzzer, Mini
18	388326	Screw, Console
19	3395683	Housing, Connector
20		Knob, Timer
	3405299	White
	3405302	Biscuit
21	3398094	Switch, Push To Start
22		Cap End (R.H.)
	8274349	White
	8274351	Biscuit
23	3399639	Switch,Temperature
24	3401695	Wire, Jumper (Tan/Black)
25	3976570	Timer, 60Hz.
26	3394427	Clip, Harness
27		Knob, Push To Start
	3405992	White
	3405995	Biscuit
28	237446	Washer
29	3401671	Jumper, Wire (White)
30	357213	Nut, Push−In (2)
31	3396029	Wire, Jumper (Temperature)
32	3400859	Screw, Grounding 8−18 x 7/32
33	3399638	Switch, Signal
34		Knob, Control (2)
	3949700	White
	3949704	Biscuit
38	337686	Screw, 8−18 x 1/2
39	8274261	Panel, Rear Console
42	3394308	Harness, Electric
46	3936144	Connector
54	297535	Bumper, Lint Lid
62	3390537	Control, Electronic
63	3391885	Connector, Edge

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION
PAINT, TOUCH−UP (1/2oz.)		
	72017	White
	4392899	Biscuit
PAINT, PRESSURIZED SPRAY (12 oz.)		
	350930	White
	4392901	Biscuit
	350938	Primer, Gray
PAINT, BULK (1 qt.)		
	799344	White (Uncut)
	4392900	Biscuit (Uncut)

CABINET PARTS

For Models: KEYS700JQ0, KEYS700JT0

(Designer White) (Biscuit)

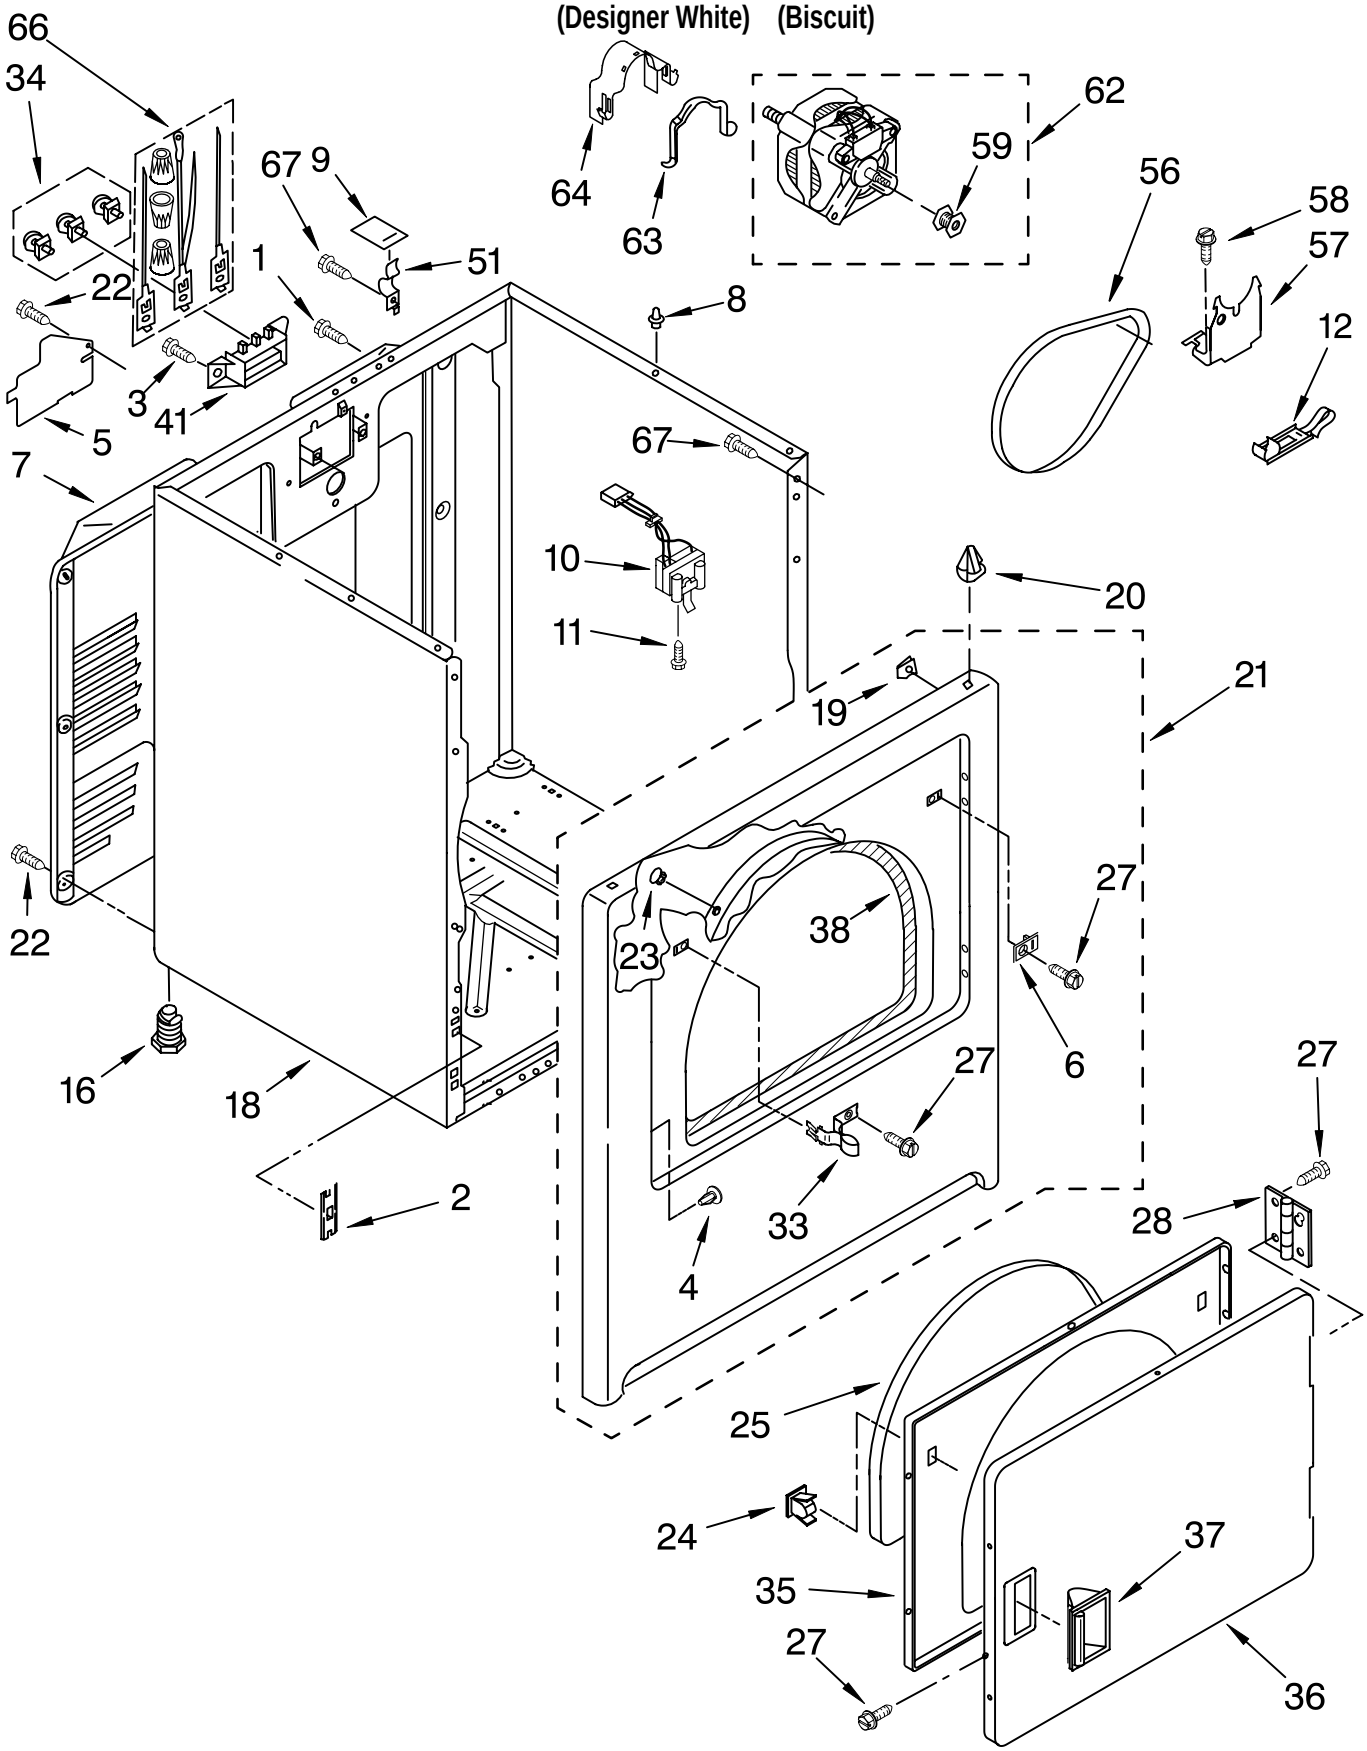

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Models: KEYS700JQ0, KEYS700JT0

(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	697776	Screw, 10−32 x 5/8
2	3394083	Clip−Front Panel
3	3393008	Screw, 10−16 x 1/2
4		Plug, Hinge Hole
	3404413	White
	3404415	Biscuit
5	3396795	Cover, Terminal Block
6		Plug, Strike Hole
	3403630	White
	3403632	Biscuit
7	3396805	Panel, Rear
8	98669	Locator, Top
9	18849	Pad, Top Hinge
10	3406107	Door Switch Assembly
11	697773	Screw, 6−20 x 7/8
12	3394332	Idler & Slide Assembly
16	3392100	Foot, Plastic Dryer
	279810	Foot − Optional (Extended Length Package Of 2) (Not Included)
18		Cabinet
	3399585	White
	3399595	Biscuit (Includes Illus. Nos. 5, 7, 16, 41 and 57)
19	98234	Clip, Ground (2)
20	18776	Lock, Front Top (2)
21		Panel, Front
	3403444	White
	8282481	Biscuit
22	693995	Screw, Hex Washer Head
23	685203	Clip, Felt Pad (2)
24	690081	Catch, Door
25	3405246	Seal, Door
27	342055	Screw, 8−18 x 1/2
28	3405514	Hinge, Door
33	3403431	Strike, Door
34	279393	Terminal Block Kit (For Terminal Block)
35	3402341	Door, Rear
36		Door, Front
	3402335	White
	3402337	Biscuit
37		Handle, Door
	3405184	White
	3405189	Biscuit
38	3406129	Seal & Bearing Assembly
41	3397659	Block, Terminal
51	238088	Hinge, Top (2)
56	8066065	Belt, Drive
57	348780	Base, Motor
58	3400500	Bolt, 5/16−18 x 3/4
59	3394341	Pulley, Motor
62	3976707	Motor, Drive 60 Hz.
63	660658	Clamp, Motor
64	3404162	Clamp, Motor (W/Shield)
66	279318	Terminal, Tinned & Brass (3) (Includes Illus. 34)
67	343641	Screw, 10−16 x 1/2

BULKHEAD PARTS

For Models: KEYS700JQ0, KEYS700JT0
(Designer White) (Biscuit)

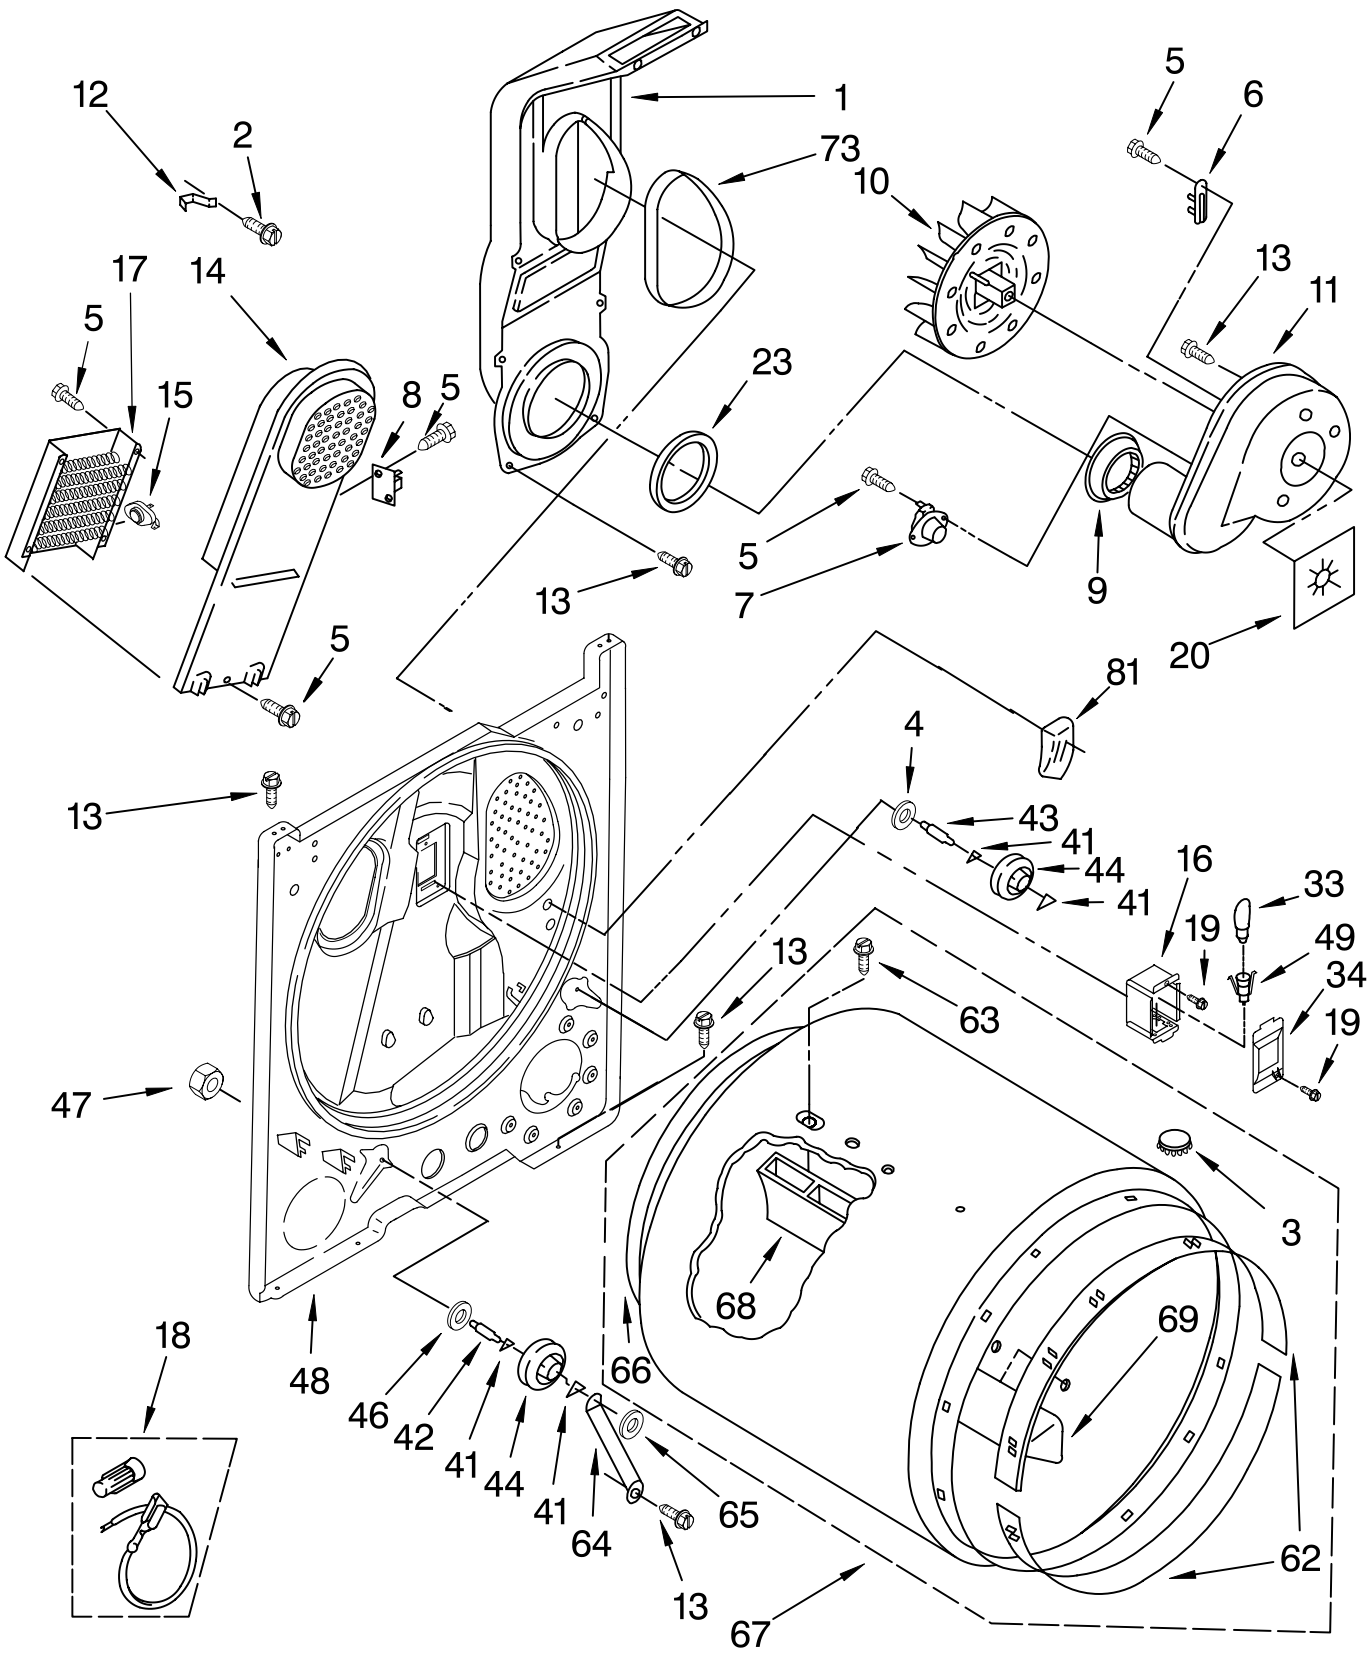

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Models: KEYS700JQ0, KEYS700JT0
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	489463	Screw, 8−18 x 5/8
3	3977358	Drum Hole Plug
4	3388703	Washer−Support
5	90767	Screw, 8−18 x 3/8
6	3392519	Thermal Fuse
7	3387134	Thermostat, Internal−Bias
8	3977393	Thermal Cut−Off (Includes Illus. No. 15)
9	696302	Shield, Exhaust
10	694089	Wheel, Blower
11	3405016	Housing, Blower
12	3398161	Clip
13	343641	Screw, 10−16 x 1/2
14	3397566	Box, Heater
15	3399693	Thermostat, 250°F (121.1°C)
16	3977373	Bracket, Drum Light
17	3403585	Heater Element
18	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)
19	487909	Screw, 8−18 x 1/2
20	3394196	Seal, Blower
23	347139	Seal, Lint
33	3406124	Light Bulb
34	3402841	Lens, Drum Light
41	690997	Tri Ring (4)
42	3399506	Shaft, L.H.
43	3399507	Shaft, R.H.
44	3397588	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8−16
48	3403414	Bulkhead
49	3403634	Socket Assembly
62	692526	Ring, Bearing (2)
63	97787	Screw, 11−16 x 3/4
64	3976434	Bracket, Shaft
65	90296	Clip
66	3406130	Seal, Rear
67	695587	Drum Assembly
68	692490	Baffle, Drum (Long) (2)
69	3403636	Baffle, Drum (Short) (1)
73	339956	Seal
81	3976479	Pad, Sensor